

NORTH SAILS FOGH LTD. 2242 LAKESHORE BLVD. WEST
TORONTO ONTARIO CANADA M8V 1A5
(416) 259-9644 FAX (416) 259-0825



VELCRO BATTEN POCKET INSTRUCTION SHEET

- A) Insert the batten into the pocket.
- B) Push the batten into the end of the pocket.
- C) Take the webbing around the batten and insert it into the pocket (with batten loader provided) until there is enough tension on the batten to remove any wrinkles from the pocket when the sail is flying.
- D) The pocket should look similar to this when properly closed.
- E) To remove the batten, insert the batten loader between the velcro and pull the loop.

Note: Do not attempt to load the batten with a screw driver, as this may damage the pocket.

When you push the velcro tab in between the batten pocket and the batten, be sure that the pull-out string is not between the velcro.

